


乐果®

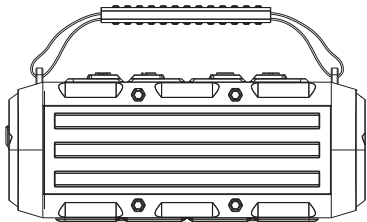

F6 超强防水蓝牙音箱



乐果微信公众号



乐果微信客服

用户手册

本手册记载了重要注意事项和产品使用方法
请仔细阅读并妥善保管

01 重要提示

1. 请阅读并遵循本使用手册
2. 请在常温环境中存放和使用本产品。
3. 请勿在高温环境下使用本产品，如阳光直射处、靠近明火处或其它类似环境。
4. 请勿丢掷，避免因跌落造成本产品损坏。
5. 请使用音箱额定电压的电源充电器充电。
6. 如果连接线与您的设备不匹配，请与销售商联系。
7. 请将音箱调至合适音量，避免对您的听力造成损害。
8. 无论设备因何原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
9. 本产品采用可回收利用的高性能材料和组件制造而成，切勿将本产品与其它生活垃圾一起处理。请了解当地关于分类收集电子、电气设备及电池的规定。您正确弃置这些产品的举动是对保护环境、人类健康、节省和理智的使用自然资源的贡献。

02 产品特性

•霸气外观，尽显阳刚本色

手提设计，阳刚霸气，为户外爱好者专属打造。

•Hi-Fi音效

BAS™ 籁音技术+双声道立体声，Hi-Fi音质彻底征服挑剔耳朵。

•超大音量

10W×2双喇叭运作，音量更大，穿透力更强，完美释放音乐激情。

•IPX7超强防水

水下1.5米浸泡无压力，超强防水，无惧雨天或水上运动。

•10小时续航

50%音量下，10小时超长续航，无需频繁充电，酣畅享受不间断乐感。

•移动电源

可为手机等移动设备提供充电支持，快乐不断电，一机多用途。


•低音强劲，音效出众

随身携带，还原音乐原声，畅享户外音乐生活。

•蓝牙版本4.2

信号更稳，功耗更低，传输距离更远。

03 产品级附件

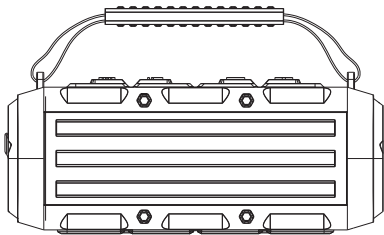

F6音箱主机×1



USB电源线/数据线× 1




AUX音频线× 1



使用指南× 1

04 机身按键功能

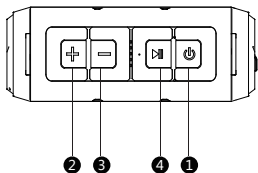

① 电源键：

长按3S开机，系统默认为蓝牙状态。长按3S关机。
开机状态下，有AUX线连接时，双击切换蓝牙或AUX模式；
开机状态下，短按查看电量（电量指示灯30S后自动熄灭）。

② + 键：

蓝牙模式下，短按进入下一曲，长按音量加；AUX模式下，长按音量加，
短按音量加一格。。

③ - 键：

蓝牙模式下，短按进入上一曲，长按音量减；AUX模式下，长按音量减，
短按音量减一格。

④ ▶|| 键：

蓝牙模式：短按播放/暂停，长按断开蓝牙连接；
来电时短按接听/挂断；长按拒接；在接听过程中长按切换到手机接听。
AUX模式：短按静音/解除静音。

05 接口功能



① DC OUT接口：

移动电源放电端口，最大输出5V，2.1A。

② DC IN接口：

电源充电：连接DC5V的USB电源适配器，建议使用大于1000mA的充电器或安卓手机充电器，或直接在电脑的USB端口充电。


③ AUX音频输入：

开机后，在AUX模式下，用标配的AUX音频线连接电脑即可播放电脑里的音乐。

* 智能省电模式：

- (1) 如果音箱开机10分钟后，蓝牙未连接，将自动关机以节省电量。
- (2) 当音箱在使用过程中电池电量不足时，音箱会发出语音低电量提示音，此时还可以继续播放。当再次发出语音低电提示音时，请立即充电，否则音箱将因电量过低而自动关机。

06 工作指示灯

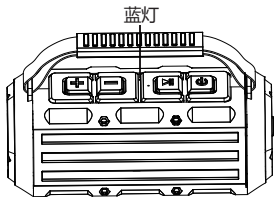

① 状态指示灯：

蓝牙模式下，未连接时快闪；连接成功后长亮。

AUX模式下，播放长亮，静音慢闪。

② 电量指示：4颗白色LED灯指示。

4颗亮100%电量；3颗亮75%电量；

2颗亮50%电量；1颗亮25%电量。

③ 充电指示：

电量指示灯慢闪：正在充电。


电量指示灯长亮：已充电完成。

④ 移动电源：

连接充电设备自动开启移动电源输出功能

无连接充电设备30秒左右自动关闭。

07 蓝牙连接

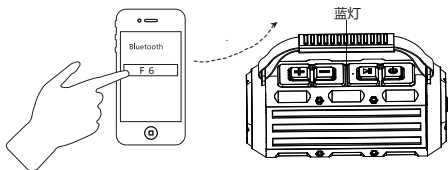

◎ 将音箱与具有蓝牙功能的平板电脑或智能手机配对

长按电源键开机，蓝灯快闪，默认进入蓝牙模式，等待蓝牙配对。

在您的智能设备上找到“设置”，打开蓝牙，搜索设备。点击蓝牙设备列表中已搜索到的F6，开始连接。

连接成功，您将听到提示音。成功连接后，即可在蓝牙设备上播放音乐或免提通话。

蓝牙连接有效距离约30m，具体因环境而异。音乐传输可能因设备与音箱之间的障碍物而中断，如墙、设备的金属外壳或附近权相同频率工作的其它设备。

◎ 注意事项：

- 1 如有必要，请输入密码“0000”。
- 1 蓝牙音箱处于开启状态时会自动回连关机前的最后一个连接设备，无需重新搜索配对蓝牙。
- 3 如需连接其它蓝牙设备，长按播放/暂停(▶||)键约4秒钟即可切断与当前设备连接，蓝灯闪烁，蓝牙返回等待连接状态。

08 规格参数

型号：F6

扬声器单元：2英寸全频扬声器+被动辐射器

额定输出功率：4 Ω 10Wx2

蓝牙版本：蓝牙4.2

播放模式：蓝牙模式/外置音频输入模式

电源供应：7.4V 2600mAh内置充电式锂电池

充电输入：DC5V,1A (Micro USB)

放电输出：5V, 2.1A

充电时间：约6—7小时

产品体积：210mm x 90.5mm x 80mm

产品重量：净重884g

09 常见故障处理方法

问题	解决方法
蓝牙模式下声音断续	确保主机与蓝牙设备的连接距离在10米以内； 请保证主机与蓝牙设备之间没有障碍物阻隔，或者尝试更换另一个蓝牙设备进行播放。
音频输入模式无声音	请检查音频连接线是否正确连接到位； 请检查电脑主机声卡运行是否正常，或是否正确连接到相应的音频输出接口。
TF卡模式无声音/ 格式错误	请检查TF卡的格式是否FAT 32 请检查TF卡内文件是否是MP3、WMA、WAV、APE、FLAC
按键无反应	先关机充电30分钟再开机，或按住复位键复位后重新开机
扬声器无声音	尝试调大音量； 请选择正确的音频输入通道； 请确保所有的线缆均正确连接
扬声器有杂音	请确保所有线缆都已正确连接； 或尝试更换其它音频线缆； 请确保音频线外接的设备端输出本身没有杂音
不充电	请确保Micro USB充电线与适配器和主机正确连接； 请检查电源适配器的电压和电流是否满足需求； 请确保Micro USB充电线与其它设备能正常充电
蓝牙配对不成功	检查设备是否处于配对状态（蓝牙模式下）； 或尝试重新开机后再次进行蓝牙配对

产品售后服务条例

产品保修规定

- 1.乐果数码移动音箱执行国家相关三包规定。
- 2.用户在按照产品使用手册正常操作的状态下,若出现因厂方原因造成的质量问题,请向产品经销商出示保修卡及购机发票提供保修服务。
- 3.产品质量问题不包括用户个人对产品音质表现的主观性异议。
- 4.购买日期以购机凭证日期为准。不能提供有效证明的,购买日期以生产日期为准。
- 5.产品附件、消耗品及选购件(如锂电池、连线、充电器、外壳、印刷品等)均不在保修范围之内;
- 6.除法律有不同规定,因本产品故障引起的附带性损失,我司不予以补偿。
- 7.出现以下状况不提供免费保修服务
 - 7.1未出示有效保修卡及购机发票的情况的(但能保证本产品在三包有效期内的除外)
 - 7.2未按产品使用说明的要求使用、维护、保管而造成损坏的;
 - 7.3购买后发生的,因摔落、进水、不适当存放等造成损坏的;
 - 7.4在非乐果授权认定的维修机构进行修理、改造、分解、清洁而造成损坏的;
 - 7.5因使用乐果推荐之附件或消耗品(锂电池、充电器、连线、适配器等)而引起的损坏的;
 - 7.6由于天灾等人为不可抗拒之自然灾害,异常电压等外部因素造成的故障;
- 8.请妥善保存保修卡,保修卡遗失不补发。

产品技术支持

- 1.热线电话:我们为用户提供售前、售中、售后全营销链的服务与支持。如需要查询任何产品信息(操作方法、规格说明、维修方式及授权维修代理店等),请与乐果热线中心联系。乐果热线中心联系电话:400-606-9918
- 2.官方主页:<http://www.nogoav.com>
- 3.官方邮箱:info@nogoav.com

产品保修卡

用户姓名：_____ 联系电话：_____

用户地址：_____

产品型号：_____ 产品序列号：_____

购机日期：_____

售机单位：_____

联系电话：_____

售机单位地址：_____

邮 编：_____

售机单位签章：_____

维修单位：_____ 联系电话：_____

地 址：_____ 邮编：_____

送修故障：_____

修理结果：_____

日 期：_____ 经手人：_____

送修故障：_____

修理结果：_____

日 期：_____ 经手人：_____

* 如您需售后咨询或帮助，请扫码添加乐果微信客服：



3C认证（国家强制性产品认证）



仅适用于非热带气候条件下安全使用



仅适用于海拔2000米以下地区安全使用



电子信息产品回收利用标志



WEEE废弃电子电器产品回收标志（不适合于生活垃圾混合倾倒）

深圳市新峰龙工业有限公司

乐果音箱客户服务部


中国广东深圳市宝安区松岗红星社区大田洋松裕路锦文西坊工业区A栋

邮政编码：518128

客服：400-606-9918

传真：0755-29603967

乐果®

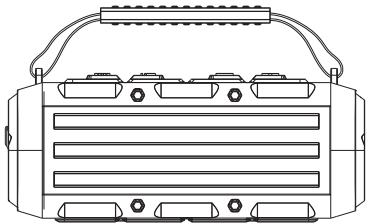

F6
waterproof bluetooth speaker

User Manual

Some important cautions and use methods are written in this manual.
Please read it before use and keep it properly

The Chapter I: Caution

1. Please study this manual carefully before using this speaker.
2. Keep the speaker away from high temperature, not allowed roasting, baking or drying
3. Do not throw or drop it, avoid destroying.
4. Please use the right adapter to recharge it.
5. If necessary, please use a soft cloth to clean the surface of the speakers.
6. In order to protect your ear, please adjust the volume to a suitable level
7. Keep this product away from hit of large external force.
8. Keep the speaker away from strong magnetic.
9. Don't open and repair the speaker by yourself.
10. In order to protect the environment, please classify garbage.

The Chapter II: Features

- **Domineering appearance**

Hand hold design , Domineering appearance with masculine character , born for outdoor enthusiasts.

- **Hi-Fi Sound**

BAS technology creates stereo and Hi-Fi sound, conquering your picky ears completely.

- **Large volume**

10W * 2 dual speaker operation, larger volume more penetrating, release music passion perfectly.

- **IPX7 super waterproof**

Underwater 1.5 meters without pressure, super waterproof, fearless rain or water sports.

- **10 hours long life**

10 hours playtime with 50% volume , you can enjoy heartbroken music no need to frequent charging.

- **Power bank function**

It' s a multifunctional speaker, which can charge for mobile phone or other devices easily, bringing continuous happiness for you.


- **Outstanding strong bass sound**

restore the original soundtrack and enjoy outdoor music life.

- **Bluetooth version 4.2**

More stable signal, lower power consumption, farther transmission distance

The Chapter III: accessories

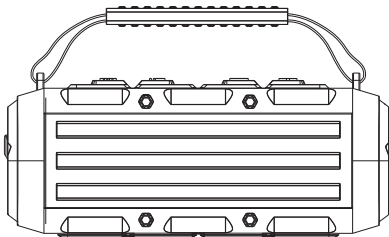

F6 speaker x 1



USB cable x 1




AUX cable x 1



User manual x 1

The Chapter IV: Buttons Function

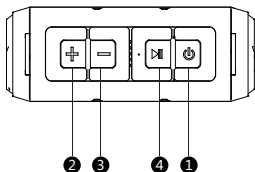

1 Power key :

Long press 3 seconds (you will hear the prompt tone) to turn on/off.

When turn on speaker , double press to switch Bluebottle mode and AUX mode.

When turn on speaker , short press to check the battery (Power indicator automatically extinguished after 30 seconds.)

2 + key :

In Bluetooth mode,short press to next track,long press to increase volume.In AUX mode,long press to increase volume,short press to increase volume one step.

3 - key :

In Bluetooth mode,short press to previous track,long press to reduce volume.In AUX mode,long press to reduce volume,short press to reduce volume one step.

4 ▶ key :

In Bluetooth mode : press to pause/play music, hold on to disconnect; Click to answer the phone when coming call, long press to reject the call; When answering the phone, long press to switch to mobile phone answer.

In AUX mode : click to mute/play, hold on is no function.

The Chapter V: Interface Function



① DC OUT interface :

power bank output port, the maximum output 5V, 2.1A.

② DC IN interface :

Recharge the battery: connect DC5V~1000mA adapter or Android cell phone charger or computer USB port.

③ AUX audio input:


Turn speaker on, connect speaker with a computer via AUX cable to play music .

* Intelligent power saving mode:

(1) Speaker will automatically turn off to save power if not connected in 10 minutes.

(2) When low battery, "LOW POWER, PLS CHARGE" sound will appear . Speaker will automatically turn off if not charge.

The Chapter VI: Indicator light

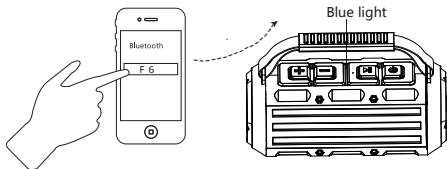

1 Status indicator:

In Bluetooth mode, the light is flashing before paired; after paired, the light is on.

In AUX mode, the light is on when play music, the light is slow blinking when it's mute.

2 Power indicator: 4 white LED light instructions.

4 indicator 100% power; 3 indicator 75% power;
2 indicator 50% power; 1 indicator 25% power

3 Charging instructions:

Battery indicator flashing : charging.

Battery indicator is on : finish charge.

4 Power bank function:

When connect the charging device , power bank function is working automatically .

Automatically , it will automatically shut down if no device connected after 30 seconds.

The Chapter VII: Bluetooth connecting

Turn on the speaker (default Bluetooth mode), blue light twinkle, and waiting for connection

Find this speaker (F6) on your hand Bluetooth device

Click "F6" to connect automatically

A voice appear when connected, valid distance up to 30m

* Remark:

- 1 If necessary, password: 0000.
- 1 When restart speaker, automatically connected with last device.
- 3 Press "Play/Pause" over 4 seconds to disconnect current device, blue light twinkle, waiting for new connection.

The Chapter XIII: Specifications

Model: F6

Speaker unit: 2 " speaker + sub-woofer

Rated output power: 4Ω 10Wx2

Bluetooth version: Bluetooth 4.2

Play mode: Bluetooth mode / AUX mode

Power supply: 7.4V 2600mAh built-in rechargeable lithium battery

Charging input: DC5V, 1A (Micro USB)

Discharge output: 5V, 2.1A

Charging time: about 6-7 hours

Product size: 210mm x 90.5mm x 80mm

Product weight: 884g

The Chapter IX: Trouble shooting

Troubles	Answer
Music brokenly	--Make sure the connecting distance $\leq 10m$ --Make sure there is no barrier between two Bluetooth device --Change another Bluetooth device to play the music
No sound under AUX	--Make sure the cable connected well --Make sure computer working well or if AUX cable connected in right port
No sound under TF card	--Make sure the TF card format is FAT32 --Make sure the music file format is MP3、WMA、WAV APE、FLAC
Button no function	--Turn off the speaker and turn it on in 30 minutes --Reset the speaker by pressing RESET key
No sound	--Increase the volume --Make sure all connecting ok --Make sure the mode is matched
Noise	--Check the cables connecting --Try different connecting cable --Make sure the music source without noise
Recharge failed	--Make sure the USB cable connected well --Make sure the adapter can work --Make sure the USB cable can work
Bluetooth pair failed	--Make sure the speaker is waiting for connecting --Restart the speaker and try again

乐果[®]

产品合格证

CERTIFICATE OF QUALITY

出厂日期



检验员



Nogo International Co.,Ltd

Add: Bldg. A, Jinwen Xifang Industrial Zone, Songyu Road, Songgang
Sub-district, Bao' an Dist., Shenzhen, 518105 China

Tel: +86 755 27388660

Fax: +86 755 82599090

www.nogoaudio.com