

# 说明书 80g双铜纸 双面单色印刷 成品折起尺寸：70X95mm (风琴式结构)



**Q26**  
迷你时尚蓝牙音箱

专利号：201830560550.8

用户手册

本手册记载了重要事项和产品使用方法，请仔细阅读并妥善保管。

### 01 重要提示

- 请阅读并遵照基本使用手册。
- 请在常温环境中存放和使用本产品。
- 请勿在高温环境下使用本产品，如阳光直射处、靠近明火处或其它类似环境。
- 请勿拆卸，避免因跌落造成本产品损坏。
- 请使用音箱额定电压的电源充电器充电。
- 请将音箱调整至合适音量，避免对您的听力造成损害。
- 如果连接线与您的设备不匹配，请与销售商联系。
- 请勿将音箱调整至合适音量，避免对您的听力造成损害。
- 本产品为防水设计，请勿将本产品放置在水杯、花瓶等水源位置旁。如果有液体溅到本产品表面，请用干抹布或餐巾擦拭即可。
- 无论设备因何原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
- 产品采用可回收利用的高性能材料和组件制造而成。切勿将本产品与其它生活垃圾一起处理。请了解当地关于分类收集电子、电气设备以及电池的法规。您正确处置这些产品的举动是对保护环境、人类健康、节省和理智的使用自然资源的贡献。

### 02 产品特性

- 小巧便携**  
迷你造型，便携提手，随身携带，音乐随行。
- 蓝牙4.2**  
传输更快更稳定，畅享无线音乐生活。
- 出色音质**  
小小身材，迸发强大音乐能量，出色音质，为您带来美妙感受。
- 5种灯光模式**  
多种变幻灯光，温馨呵护你的浪漫小心思。
- 一键拍照**  
取代手机拍照键，凹造型更随心，美好时光一键定格。
- 最大支持32G TF卡扩展**  
支持MP3/WMA/WAV/APE/FLAC多种音频格式。
- 支持多种音频格式**  
支持MP3/WMA/WAV/APE/FLAC多种音频格式。

### 04 机身按键功能



- ① “” 键：长按开/关机；短按拍照(需蓝牙连接手机，打开手机摄像头)。任何模式下(未蓝牙连接手机打开摄像头时)短按无作用。
- ② “” 键：短按暂停/播放(来电状态下，短按接听/挂断电话，长按拒接电话，双击回拨最后一个电话号码)。
- ③ “” 键：短按“RESET”指示孔复位。
- ④ “” 键：短按上一曲；长按音量减。
- ⑤ “” 键：短按下一曲；长按音量加。
- ⑥ “” 键：短按切换蓝牙/TF卡模式。
- ⑦ “” 键：
  - 在亮灯状态下，短按切换灯光模式；长按关闭灯光。
  - 关闭灯光状态下短按唤醒灯光(唤醒后灯光模式为上一次关闭前的灯光模式)。
  - 5种灯光模式分别为：旋转炫光-瀑布流光-随机快闪-温馨暖色灯-红色灯笼。

### 05 接口功能



- DC IN接口功能：
  - 数据传输：音箱内插入TF卡，数据线连接电脑，在电脑上打开新硬件即可拷贝音乐文件存入TF卡。
  - 音箱开机状态下，用数据传输功能的USB线连接移动设备或电脑，即可播放。
  - 电源充电：连接DC5V的USB电源适配器，建议使用大于1000mA的充电器或安卓手机充电器，或直接在电脑的USB端口充电。
- 充电指示灯：任何模式下充电时指示灯为红色，充满后指示灯灭。
- TF卡接口：开机状态下插入含有音乐文件的TF卡，即自动播放TF卡内的音乐文件。(如有需要可短按M键切换至蓝牙模式)

**\* 智能省电模式：**

- 如果音箱开机8分钟后没有音乐播放或未连接蓝牙，音箱将自动关机以节省电量。
- 当音箱在使用过程中电量不足时，音箱会发出“嘟嘟”三声电量提示，此时请立即充电，否则音箱将因电量过低而自动关机。

### 06 蓝牙连接

将音箱与具有蓝牙功能的平板电脑或智能手机配对：



- 1) 长按电源键开机，蓝灯闪亮，默认进入蓝牙模式，等待蓝牙配对。
- 2) 在您的智能设备上找到“设置”，打开蓝牙，搜索设备。点击蓝牙设备列表中已搜索到的“Q26”，开始连接。
- 3) 连接成功，您将听到提示音，成功连接后，即可在蓝牙设备上播放音乐或免提通话。
- 4) 蓝牙连接有效距离约10m，具体因环境而异。音乐传输可能因设备与音箱之间的障碍物而中断，如墙、设备的金属外壳或附近其他工作的其它设备。

**注意事项：**  
音箱开启后，处于蓝牙模式下，会自动回连关机的最后一个连接设备，无需重新搜索配对蓝牙。

### 07 规格参数

型号	Q26
扬声器单元	Φ33MM
额定输出功率	4Ω 3W
蓝牙版本	蓝牙4.2
播放模式	蓝牙模式 / TF卡模式
存储类型	最大支持32GTF卡
音乐格式	APE / FLAC / MP3 / WMA / WAV
充电输入	DC5V,1A (Micro USB)
充电时间	约2小时
播放时间	50%音量，不开灯，约14小时； 50%音量，开灯，约4.5小时
电池容量	850mAh
产品体积	Φ56x61mm
产品重量	约84g
外观专利	201830560550.8

(\*以上播放时间数据为实验室所测，视不同播放状态可能有所变化)

### 08 常见故障处理方法

问题	解决方法
蓝牙模式下声音断续	确保主机与蓝牙设备的连接距离在10米以内； 请保证主机与蓝牙设备之间没有障碍物阻隔， 或者尝试更换另一个蓝牙设备进行播放。
音频输入模式无声音	请检查音频连接是否正确连接到接口； 请检查蓝牙主机蓝牙运行是否正常，或是否正确连接到相应的音频输出接口。
TF卡模式无声音/格式错误	请检查TF卡的格式是否FAT32； 请检查TF卡内文件是否是APE / FLAC / MP3 / WMA / WAV。
按键无反应	先关机充电30分钟再开机，或按复位键复位后再重新开机。
扬声器无声音	尝试调大音量； 请选择正确的音频输入通道； 请确保所有的线缆均正确连接。
扬声器有杂音	请确保所有线缆都已正确连接； 或尝试更换其它音频线缆； 请确保音频线外接的设备输出本身没有杂音。
不充电	请确保Micro USB充电线与适配器正确连接； 请检查电源适配器的电压和电流是否满足需求； 请确保Micro USB充电线与其它设备能正常充电。
蓝牙配对不成功	检查设备是否处于配对状态(蓝牙模式下)；或 尝试重新开机后再次进行蓝牙配对。

### 产品售后服务条例

**产品保修规定**

1. 乐果数码移动音箱执行国家三包规定。
2. 用户在按照产品使用手册正常操作的状态下，若出现因厂方原因造成的质量问题，请向产品经销商出示保修卡及购机发票提供维修服务。
3. 产品质量问题不包括用户个人对产品品质表现的主观性异议。
4. 购买日期以购机凭证日期为准。不能提供有效证明的，购买日期以生产日期为准。
5. 产品附件、消耗品及选配件(如锂电池、充电器、外壳、印刷品等)均不在保修范围之内；
6. 除法律有不同规定，因本产品故障引起的附带性损失，我司不予以补偿。
7. 出现以下状况不提供免费维修服务
  - 7.1 未出示有效保修卡及购机发票的情况的(但能证明本产品在三包有效期内除外)
  - 7.2 未按产品使用手册的要求使用、维护、保管而造成损坏的；
  - 7.3 购买后发生的、因摔落、进水、不当存放等造成损坏的；
  - 7.4 在非乐果授权认定的维修机构进行修理、改造、分解、清洁而造成损坏的；
  - 7.5 因使用乐果推荐之附件或消耗品(锂电池、充电器、连线、适配器等)而引起的损坏的；
  - 7.6 由于火灾等人为不可抗力之自然灾害，异常电压等外部因素造成的故障的；
  - 7.7 请妥善保管保修卡，保修卡遗失不补发。

**产品技术支持**

1. 热线电话：为用户提供售前、售中、售后全营销链的服务与支持。如需要查询任何产品信息(操作方法、规格说明、维修方式及授权维修店等)，请与乐果热线中心联系。乐果热线中心联系电话：400-606-9918
2. 官方网站：http://www.nogoav.com
3. 官方微博：@nogoav

### 产品保修卡

用户名：\_\_\_\_\_ 联系电话：\_\_\_\_\_

用户地址：\_\_\_\_\_

产品型号：\_\_\_\_\_ 产品序列号：\_\_\_\_\_

购机日期：\_\_\_\_\_

售机单位：\_\_\_\_\_

联系电话：\_\_\_\_\_

售机单位地址：\_\_\_\_\_

邮 编：\_\_\_\_\_

售机单位盖章：\_\_\_\_\_

维修单位：\_\_\_\_\_ 联系电话：\_\_\_\_\_

地 址：\_\_\_\_\_ 邮 编：\_\_\_\_\_

送修故障：\_\_\_\_\_

修理结果：\_\_\_\_\_


日 期：\_\_\_\_\_ 经手人：\_\_\_\_\_

送修故障：\_\_\_\_\_

修理结果：\_\_\_\_\_

日 期：\_\_\_\_\_ 经手人：\_\_\_\_\_

正面



**Q26**  
BLUETOOTH SPEAKER

专利号：201830560550.8

User Manual

Some important cautions and use methods are written in this manual. Please read it before use and keep it properly.

### The Chapter I: Caution

- 1) Please study this manual carefully and use the speaker according to it.
- 2) Please use and keep the speaker in normal temperature condition.
- 3) Keep the speaker away from high temperature. Direct sunlight, fire or other similar environment is not allowed.
- 4) To avoid destroying, do not throw or drop it.
- 5) Please use the right adaptor to recharge it.
- 6) If the USB cable, or aux cable can not match your devices, please contact local retailers.
- 7) In order to protect your ears, please adjust the volume to a suitable level.


The speaker should not be exposed to dripping or splashing, and the objects filled with liquids, such as vases, should not be placed on the apparatus. As with any electronics products, take care not to spill liquids into any part of the system.

- 8) Do not expose the product to rain or moisture.
- 9) Don't disassemble the speaker by yourself when the speaker can't work for any reason. Please contact professional maintenance personnel.
- 10) The speaker is made up of recyclable high performance materials and components. Don't dispose it with daily rubbish. Please understand local rules about the classified collection of electrical, electronic equipment and battery. How you discard the speaker correctly will make contribute to environment protection, human health and saving natural resources.

### The Chapter II: Features


- Easy Carrying**  
Mini size, portable handle, can take it anywhere with music.
- Bluetooth 4.2 Wireless technology**  
Faster and more stable transmission, enjoy wireless music life.
- Excellent sound**  
Powerful music energy in small body, wonderful sound makes you feel awesome.
- Five lighting mode**  
Multiple lighting modes, warm and romantic.
- Remote shutter**  
Replace cell phone camera key, pose casually, record wonderful hour.
- Support ≤32G TF card**  
Thousands of songs can be played at any time by yourself.
- Support multiple audio formats**  
Support MP3/WMA/APE/FLAC audio formats.

### The Chapter IV: Buttons Function

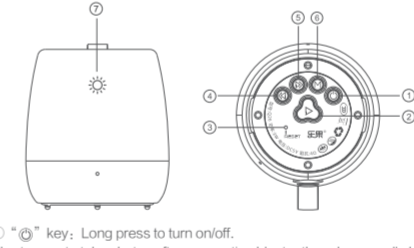

- ① “” key: Long press to turn on/off. Short press to take photos after connecting bluetooth and open cell phone camera. If no connect bluetooth and open camera, under any mode, it doesn't work.
- ② “” key: Short press to pause or play music. \* When you have an incoming call, short press to answer the phone/hang up; Long press to reject the incoming call. \* Double press to redial the last number.
- ③ “” key: Short press “RESET”.
- ④ “” key: Short press to turn to previous song; long press to turn down.
- ⑤ “” key: Short press to turn to next song; long press to turn up.
- ⑥ “” key: short press to switch the mode between bottle mode/ TF card mode.
- ⑦ “” key:
  1. Short press to change light mode; long press to close light.
  2. Under the status of light off, short press to awaken light (the mode is you used last time).
  3. Five light modes: Revolving RGB light—Up and down RGB light—Random flash—Warm light—Red lantern.

### The Chapter VI: Interface Function



- ① DC IN Port:
  - a. Data transfer: Turn speaker off, insert TF card to speaker. Connect with computer by USB cable. Then Transfer data (music files) from the computer to the TF card.
  - b. Turn speaker on, connect speaker with a computer or other devices via data cable to play music in computer or other devices.
  - c. Recharge the battery: connect DC5V-1000mA adapter or Android cell phone charger or computer USB port.
- ② Charge Indicator: Red light when charge, light off when battery full.
- ③ TF card port: Turn on speaker, insert TF card (content music), speaker will automatically play the TF card music. (If needed, presses “M” to change to Bluetooth mode or any other mode)

**\* Intelligent power saving mode:**

- a. Speaker will automatically turn off to save power if no play music or no Bluetooth connected over 8 mins.
- b. When low battery, “beep” sound will appear every minute. Speaker will automatically turn off if not charge. Please charge it in time.

### The Chapter VII: Bluetooth connecting

1) Turn on the speaker (default Bluetooth mode), blue light twinkle, and waiting for connection.

2) Find this speaker “Q26” on your hand Bluetooth device.

3) Click “Q26” to connect automatically.

4) A voice appear when connected, valid distance 10m.

**\* Remark:**  
When restart speaker, automatically connected with last device.

### The Chapter VIII: Specification

Model No.	Q26
Speaker unit	Φ33MM
Power	4Ω 3W
Bluetooth version	4.2
Play mode	Bluetooth / TF card
Memory type	≤ 32GB TF card
Music format	APE / FLAC / MP3 / WMA / WAV
Input	DC5V,1A (Micro USB port)
Charging time	≈2h
play time	about 14 hours(50% volume,turn off the light) about 4.5 hours(50% volume,turn on the light)
Battery	850mAh
Speaker size	Φ56x61mm
Speaker N.W.	≈84g

\* The above play time is measured by the lab, and it may change at different play condition.

### The Chapter IX: Troubleshooting

Troubles	Answer
Music brokenly	—Make sure the connecting distance≤10m. —Make sure there is no barrier between two Bluetooth device. —Change another Bluetooth device to play the music.
No sound under AUX	—Make sure the cable connected well. —Make sure computer working well or if AUX cable connected in right port.
No sound under TF card	—Make sure the TF card format is FAT32. —Make sure the music file format is APE / FLAC / MP3 / WMA / WAV.
Button no function	—Turn off the speaker and turn it on in 30 minutes. —Reset the speaker by pressing RESET key.
No sound	—Increase the volume. —Make sure at connecting ok. —Make sure the mode is matched.
Noise	—Check the cables connecting. —Try different connecting cable. —Make sure the music source without noise.
Recharge failed	—Make sure the USB cable connected well. —Make sure the adapter can work. —Make sure the USB cable can work.
Bluetooth pair failed	—Make sure the speaker is waiting for connecting. —Restart the speaker and try again.

### 产品合格证

CERTIFICATE OF QUALITY

出厂日期：\_\_\_\_\_

检验员：\_\_\_\_\_

3C认证(国家强制性产品认证)

仅适用于非热带气候条件下安全使用

仅适用于海拔2000米以下地区安全使用

电子信息产品回收标志

WEEE废弃电子产品回收标志(不适合于生活垃圾混合填埋)

深圳市新峰龙工业有限公司 / 乐果音箱客户服务部

中国广东深圳市宝安区松岗红星社区大田洋松岗路城西工业区A栋

邮政编码：518128

客服：400-606-9918

传真：0755-29603967

网站：www.nogoav.com

反面